


NV05A Letter Box Digital Lock

User Manual

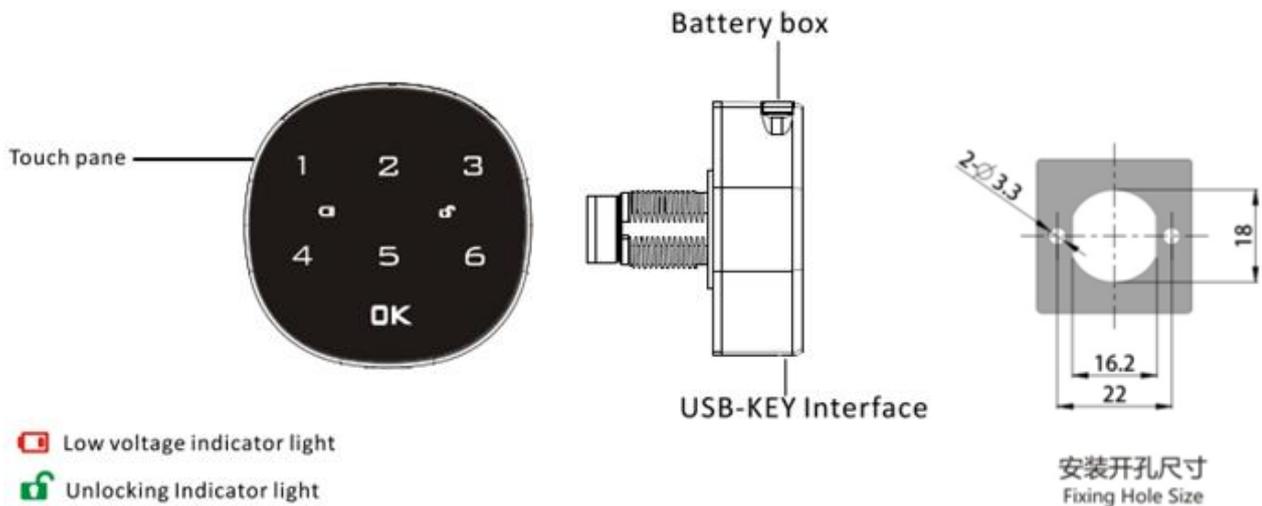

How to operate

■ Lock & unlock

Unlock

1. Input factory default password “1234+OK”
Or input factory default management password “4321+OK”
2. Buzzer gives out a long di... sound
3. When the green indicator light  is on
4. Rotate the knob within 3 seconds to open the lock

When password is wrong alarming sound di.. di.. Di.. 3 times.

When lock shows this signal  means low voltage

Note: when input management password to unlock, user password will be changed back to default 1234



Lock

Rotate back the knob to lock position

■ Setting

1- Change password



1. Input current user password +OK or management password+OK
buzzer gives out a long di sound,  will be on
2. Press OK at least 2 seconds,  flash
3. Input new password, press OK, when you heard a long di sound means password already been changed.

* Password can be consisted of 4-15 digits, management password and user password can not be the same password

2- Turn on public mode, set temporary password

Turn on public mode

1. Input password + **OK**, buzzer gives out a long di..... Sound
Unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle,
press OK again.
3. Input “4 4”, press **OK**, when you heard a long di..... sound
means public mode already been set.

Set temporary password

1. Press **OK**. Unlocking indicator light  will twinkle
2. Input the new password consisted of 4-15 digits
3. Press **OK**, hear a long di, unlocking indicator light  is on
temporary password already been set

Temporary password can be used for 1 time only

3- Turn off public mode

1. Input password + **OK**, buzzer gives out a long di sound
unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle,
press OK again.
3. Input 4 3, press **OK**, when you heard a long di.... Sound,
means public mode already been turned off.

4- Turn on/off Fake Pin code function

1. Input password + OK, buzzer gives out a long di sound,
unlocking indicator light  is on
2. Press OK at least 2 seconds, unlocking indicator light  twinkle,
press OK again.
3. Input 4 2, press OK, when you heard a long di sound means
Fake Pin code mode already been turned on.
Input 4 1, press OK, when you heard a long di sound means
Fake Pin code mode already been turned off.

Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.

3. Features

1. Decode:When password been forgotten, you can get the decode number by providing the code on the lock body to the distributor or you can use USB-KEY to decode. The password will be changed back to the original “1234”
2. Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits
3. Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60 seconds.
4. Automatic power shortage prompts (When lock show this signal ). The lock cannot be operated when the voltage is very low
5. Equipped with 3V Cr2032 batteries, last password will not be lost after changing the battery.